

FUN:BIKES

LET THE FUN BEGIN

Tightening Your Chain on a Chaos Scooter

This is a simple guide, intended for Funbikes Customers who have purchased a Chaos Scooter, It contains instructional steps on how to tighten your chain, and includes images to aid you in the process.



Tightening Your Chain on a Chaos Scooter

This guide explains how to tighten your chain.

What product does this guide apply to?

- Chaos 48 Volt 1000w Electric Scooter Powerboard
- Chaos 48 Volt 1000w Electric Scooter Big Wheel Powerboard
- Chaos Sport 48 Volt 1600w Electric Scooter Big Wheel Powerboard
- Chaos Sport 48 Volt 1600w Electric Scooter Big Wheel Off Road Powerboard



Step 1

Loosen your rear axle bolt, for this you will need a 17mm spanner or socket and an 8mm allen key.



Step 2

Using a 10mm spanner turn the nuts on the chain tensioner clockwise. Make sure that you tighten each nut equally, so the rear wheel remains square in the bike. I would recommend adjusting the nuts a quarter of a turn at a time until the chain is at the desired tension.



Step 3

Once the chain is at the desired tension retighten the rear axle.



FUN:BIKES

WWW.FUNBIKES.CO.UK

**Follow FunBikes
for Updates**



**If you require more assistance, please feel
free to contact us:**

Telephone- 01664 498 642

Email- tech@funbikes.co.uk

